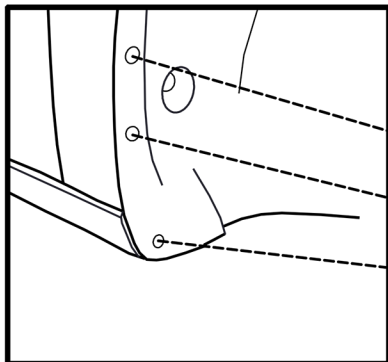

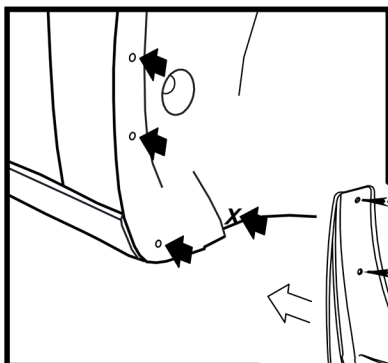


Mudflaps front FORD Focus 3,x6. 2015->




Preparation

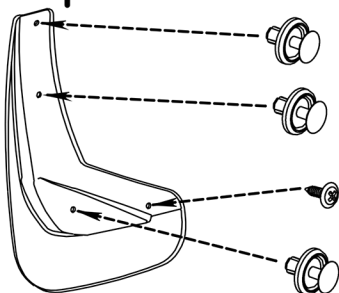
3x  - Original screw



Installation

1x  - Screw $\phi 4,2 \times 16$ mm

3x  - Original screw



ART.: EXP.NLF.16.72.F11

Set package

Mudflap - 2 pcs Screw $\phi 4,2 \times 16$ mm - 2 pcs.