


Mudflap rear Ford Focus 3 wagon

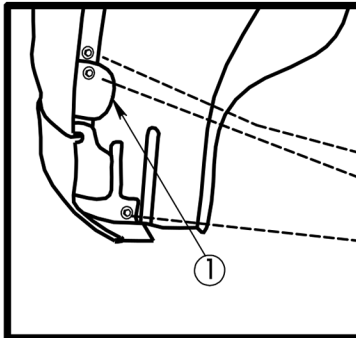


Preparation

3x  Original screw


1x  Original screw




- 1. Bend up OEM fender guard and uninstal OEM screw.

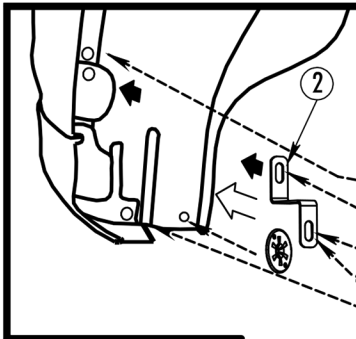



Instalation

2x  Original screw

1x  Original screw


1x  Spring clip

1x  Spring washer

2x  Screw 6x15

Арт.: EXP.NLF.16.74.E11

- 2. Install the steel bracket with OEM screw before mudflap installation (see picture)

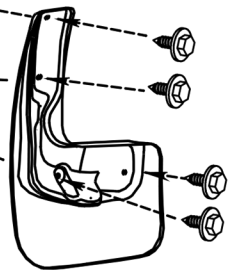

Set package

Mudflap - 2pcs Bracket - 2pcs. Screw 6x15 - 4pcs.

Spring clip - 2pcs. Spring washer - 2pcs.