



Mudflaps front Renault Sandero Stepway 2010->

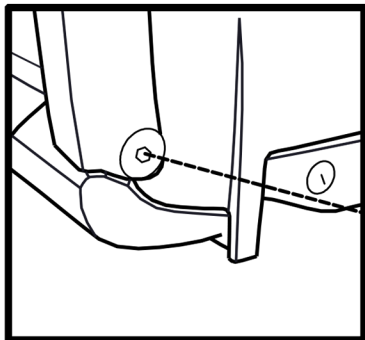

Preparation

1x  - Original screw

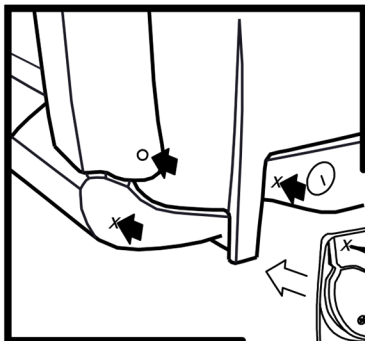

Installation

1x  - Original screw
3x  - Screw $\varnothing 4,2 \times 16 \text{mm}$

Art.: EXP.NLF.41.28.F11

! Optionally for better fit fasten
by screw in specified point

Set package

Mudflap - 2pcs.; Screw $\varnothing 4,2 \times 16 \text{mm}$ - 6pcs.